


# MODEL WN150

## INSTALLATION INSTRUCTIONS - WET NICHE UNDERWATER POOL AND SPA LIGHT.

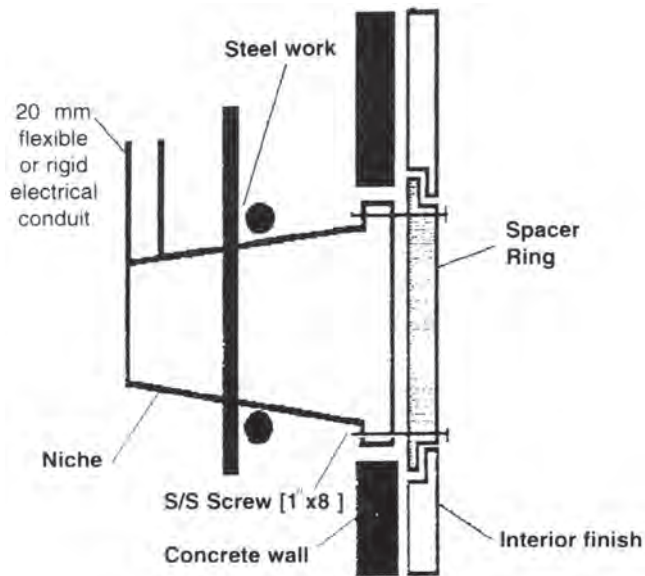


### Steps for concrete installation:

1. Tie niche to steelwork. Front of niche should be flush or slightly recessed from finished concrete wall.
2. Cover niche to prevent entry of concrete.
3. After concreting, align larger holes on spacer ring with smaller holes on front of niche. Using 2 screws (1"x8) and the larger holes on spacer ring, screw spacer ring to front of niche.
4. Pebble or tile to raised edge of the spacer ring. Spacer ring should now be flush with finished interior of pool or spa.
5. Attach light to spacer ring using 2 screws (3/4"x8).

### Steps for fibreglass installation:

1. Locate position of light in pool or spa making sure that no pipe work is present at that location.
2. Drill 118mm diameter hole for niche.
3. Place niche in hole.
4. Mark and drill 6 fixing holes (5mm) using larger holes on niche as a template.
5. Place silicon between niche and wall.
6. Place ring over back of niche, applying silicon between ring and wall. Make sure smaller holes in ring align with previously drilled holes.
7. Place 6 screws provided (1"x8) into larger holes drilled and tighten against ring.
8. Attach light to front of niche using 2 screws

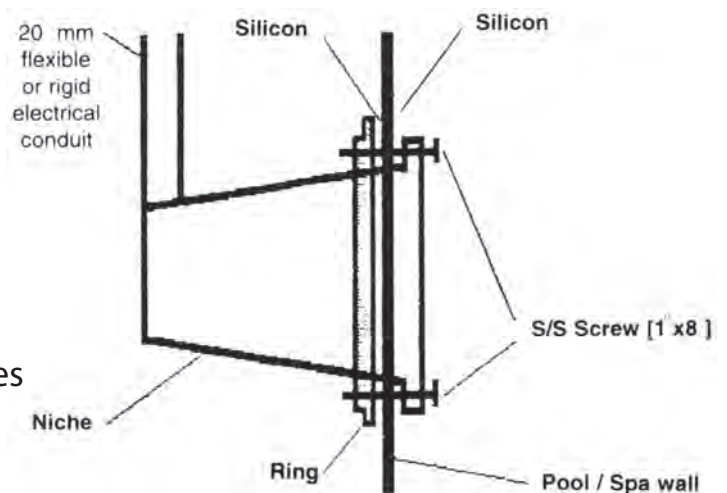

### Notes:

1. Conduit for electrical cable will be full of water. Take conduit above water line in pool or spa and break conduit in deck box so that water will not siphon out of pool or spa if filled above conduit height.
2. Leave enough cable wound around light in niche so that the light can be removed above water level for easy servicing.
3. Ensure light is fully submerged before turning it on.