

# Instructions for replacement of globe in SE3M Light


**Spare Part required:**  
Globe and Connector  
SE 307 12v 100W  
SE 307 24v 150W



**Spare Part required:**  
Brown Gasket  
SE 303M



**Tools required:**  
- Flat head screwdriver  
- Phillips head screwdriver

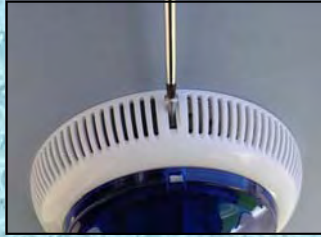

**NO 1**

Remove the screw located at the top of the light.




**NO 2**

Push the light up to remove it from the hook bracket, then remove the light from the pool.



**NO 3**

Place the light on the ground at the pool's edge and dry it with a towel. It is very important that **NO** moisture gets inside the light assembly.

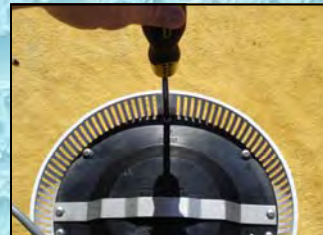

**NO 4**

Remove the nine screws from the back plate, this will separate the back plate from the rim.



**NO 5**

Remove the back plate from the rim, turn it over to reveal the globe.



**NO 6**


Loosen the two screws holding the connector to the terminal posts.  
Side connector off terminal posts



**NO 7**

Check the old globe for signs of moisture in the light.

- Are the pins on the globe blackened?
- Is there a build up of corrosion on the globe pins?

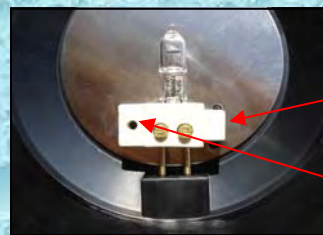

**NO 8**

Insert the new globe **and** connector onto terminal posts.  
The connector must sit between the guide posts to ensure the globe is level.  
The hole on the connector should line up with the guide post beneath it.



**NO 9**

Remove the gasket.  
Check the gasket for signs of wear or any cracks, if any signs of wear are present it is recommended that the gasket is replaced.



**NO 10**

Check the lens for cracks.  
Place the gasket back in the lens.



**NO 11**

Before the back plate is replaced, ensure the 'TOP' Mark on the back plate lines up with the screw slot at the top of the rim.



**NO 12**

Put the back plate back in the rim and replace the seven screws.  
Do not place screws in the holes for the back strap.  
Replace the two screws in back strap last.



**NO 13**

Loop the cable around the edge of the light.  
**Note: the slot for the hook bracket screw should be at the top.**



**NO 14**

Hook the back strap over the hook bracket.  
Push the light down to lock into place.  
Replace hook bracket screw and tighten.  
**DO NOT OVER TIGHTEN THE SCREW**